





 


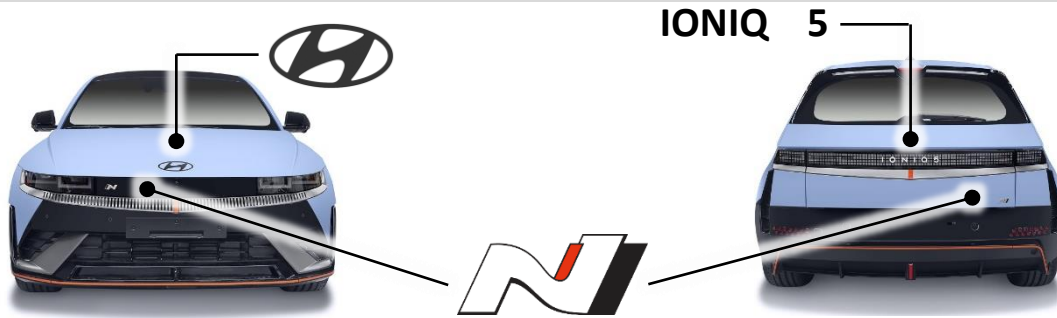

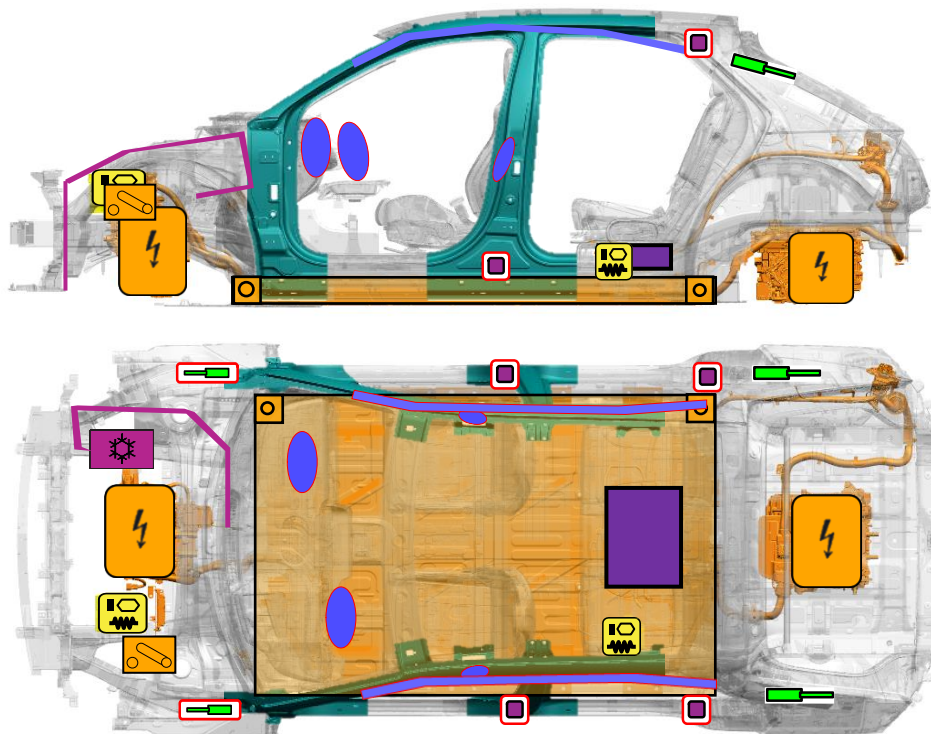






## Vehicle Identification/Recognition



## Accessing Vehicle



 Supplemental Restraint System Control Module (SRSCM)	 Airbag	 Airbag Gas Inflators
 High voltage cable	 12V Battery	 Air-conditioning line
 High voltage disconnect	 OBC (On – Board Charger)	 Ultra-High Strength Steel
 High Voltage Battery	 Air-conditioning component	 Seat belt pretensioner
 Motor Drive Unit	 Gas Strut	

## Disabling Vehicle

**1**



**2**



5m (16.4ft) or more  
To Prevent Accidental Restart

**3**



1

1) Locate 12V battery  
2) Disconnect 12V  
3) Wait 5min.

**OR**

**1**



**2**



5m (16.4ft) or more  
To Prevent Accidental Restart

**3**




Remove cover (A)

Disconnect High Voltage System by removing fuse with yellow tab, then wait 5 minutes

## Vehicle Towing Information

*Tow the vehicle using a flat bed or using wheel dollies. Never tow the vehicle with the front or rear wheels on the ground*

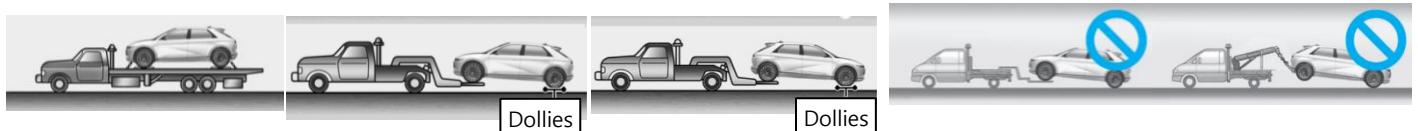

**For further information, please refer to the Emergency Response Guide (ERG).**

Applicable to IONIQ6 vehicles first sold in the United States.	ID. No.	Version No.	Page
	KMH-NEN	2023.11.06	2 of 2